

How To Replace The Windshield

Tools needed: 10mm & 13mm wrench and socket, Ratchet



- **Step One:** Remove both nuts from the bolts holding the mirror to the roof upright. While holding the mirror, remove both bolts and set the mirror to the side. Remove both mirrors.



- **Step Two:** Remove the nuts and bolts that the windshield rests on.



- **Step Three:** With all of the hardware removed, the windshield can be removed by pulling the windshield towards you and prying open the black plastic retainers on the roof support bar.



Perform this task on both sides. Once both sides have been released from the roof supports, you can pull the windshield off. If replacing the windshield, you will need to remove the black plastic retainers and reuse them on the new windshield.